




PRO-PICKLE

www.puttermanathletics.com

INSTALLATION INSTRUCTIONS

PRO-Pickle V3 Portable Net System

#PROPBS-3

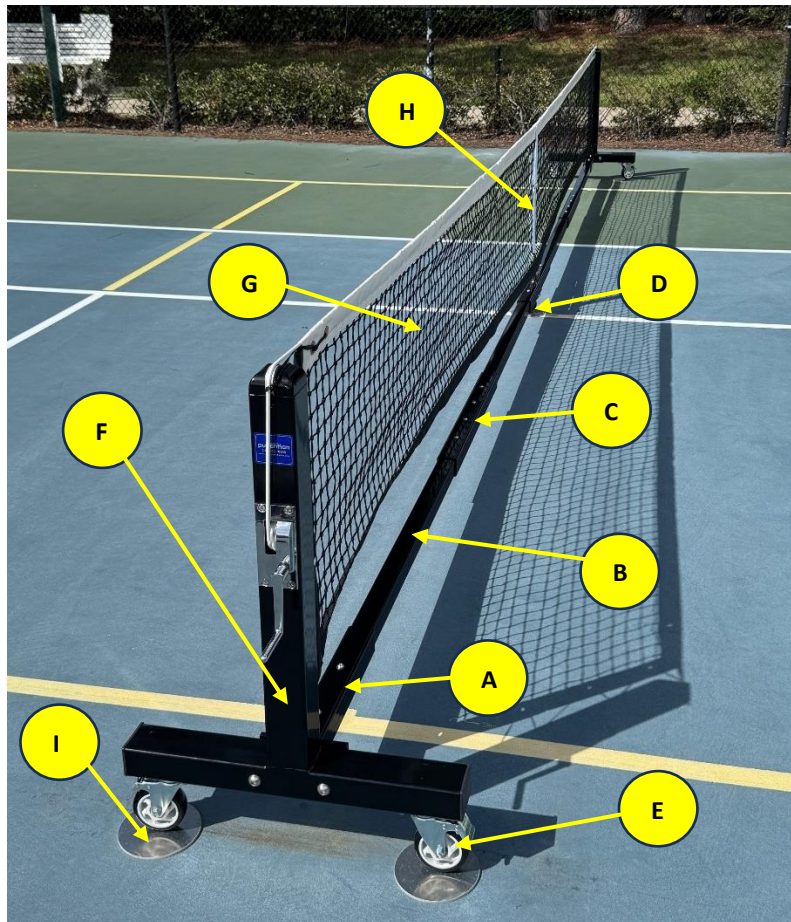

PARTS LIST:

- A - End Coupler (2) – T-Shaped Tubular Steel with Flange
- B - Crossmembers (4) – 66" L Tubular Steel
- C - Cross-Member Couplers (2) – 24" L Tubular Steel

D - Center Coupler (1) – 24" L Tubular Steel with Center Strap Connector
E - Locking Caster Wheels (5) – Attached to Post Uprights and Center Coupler
F - Net Post Uprights w/lacing Rods – With Caps and Crank Mechanism Attached
G – Tournament Level Net (1)
H - Center Strap (1)
I - Caster Weight Dispersion Plates (5)

HARDWARE INCLUDED:


Crank Handle (1)
M8 x 20mm bolts and washers (16)
M12 x 110mm bolts and washers (4)
Allen Wrench (2)
Box-end Wrench (1)

TOOLS NEEDED:

M8 Allen Wrench
M12 Allen Wrench
Tape Measure
10" Adjustable wrenches (2)

FRAME INSTALLATION:

STEP 1: Uncrate and lay out all parts on the court. Care should be taken not to damage the playing surface.

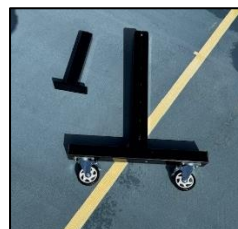

Picture 1A



Picture 1B

STEP 2: Attach an End Coupler (A) to the Net Post Upright (F) with two of the M12 bolts, washers and nuts provided.



Picture 2A



Picture 2B

STEP 3: Lock the casters under the Net Post Upright and slide one of the Crossmember (B) all the way into the End Coupler (A) until it cannot go any further. Tighten down both screws into the threaded hole provided. To save time when assembling the system, a drill with hex bits to tighten the bolts.

STEP 4: Locate one of the two Cross-Member Couplers (C) and slide it onto the end of the Crossmember (B) you were just handling. Align and tighten the two bolts on the end that slid over the



Picture 3


crossmember. Then attach the Center Coupler (D) to the opposite side and tighten it down with the M8 screws.

STEP 5: Repeat Steps 1-4 on the opposite side of the unit.

STEP 6: Attach the Net (G) as shown below. Tighten the net until taut. Then lace the net with rope or ty-wraps. Next, attach the center strap (H) and adjust so that the top of the net sits 34" above the center of the court surface.



Picture 4

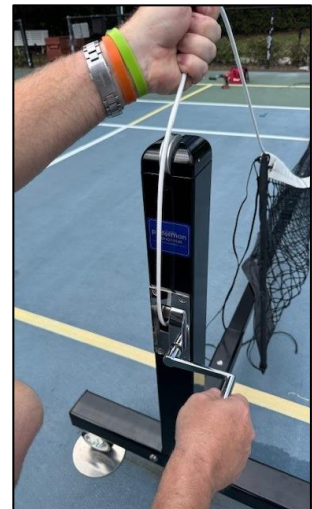

STEP 10: Lastly, unlock all casters and move the portable net system into place. Always lock down all casters before playing... have fun and enjoy!

WARNING: When placing the unit on asphalt, urethane, or cushioned surfaces, always place the weight displacement plates (I) underneath all five caster wheels (E). If the plates are not placed under the wheels, you risk denting or damaging soft surfaces.

For added aesthetic value, the round silver weight displacement plates can be painted to match the out-of-bounds court color.

